



Presents

# Repair Manuals from

# SELOC.

## Contents of this manual:

---

<b>1</b>	<b>GENERAL INFORMATION, SAFETY AND TOOLS</b>	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-12
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-16
		TOOLS	1-18
		FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
		SPECIFICATIONS	1-27
		<hr/>	
<b>2</b>	<b>MAINTENANCE &amp; TUNE-UP</b>	ENGINE MAINTENANCE	2-2
		BOAT MAINTENANCE	2-7
		TUNE-UP	2-11
		SPRING COMMISSIONING CHECKLIST	2-32
		WINTER STORAGE CHECKLIST	2-32
		SPECIFICATIONS	2-34
<hr/>			
<b>3</b>	<b>FUEL SYSTEM</b>	FUEL AND COMBUSTION	3-2
		FUEL SYSTEM	3-3
		TROUBLESHOOTING	3-8
		CARBURETOR SERVICE	3-11
		REED VALVE SERVICE	3-26
		FUEL PUMP SERVICE	3-28
		ELECTRONIC FUEL INJECTION	3-33
		SPECIFICATIONS	3-52
<hr/>			
<b>4</b>	<b>IGNITION &amp; ELECTRICAL SYSTEMS</b>	UNDERSTANDING AND TROUBLESHOOTING	
		ELECTRICAL SYSTEMS	4-2
		BREAKER POINTS IGNITION (MAGNETO IGNITION)	4-7
		CAPACITOR DISCHARGE IGNITION (CDI SYSTEM)	4-11
		CHARGING CIRCUIT	4-38
		STARTING CIRCUIT	4-44
		SPECIFICATIONS	4-50
		WIRING DIAGRAMS	4-51
<hr/>			
<b>5</b>	<b>OIL INJECTION</b>	OIL INJECTION SYSTEM	5-2
		COOLING SYSTEM	5-11
		WARNING SYSTEMS	5-14
		OVERHEAT WARNING SYSTEM	5-18

# CONTENTS

ENGINE MECHANICAL 6-2  
FLYWHEEL 6-2  
POWERHEAD MECHANICAL 6-6  
POWERHEAD RECONDITIONING 6-32  
SPECIFICATIONS 6-36

## POWERHEAD

# 6

LOWER UNIT 7-2  
JET DRIVE 7-47

## LOWER UNIT

# 7

GAS ASSISTED TILT 8-2  
MANUAL TILT 8-2  
POWER TILT 8-3  
POWER TRIM/TILT 8-6

## TRIM & TILT

# 8

REMOTE CONTROL BOX 9-2  
TILLER HANDLE 9-7

## REMOTE CONTROLS

# 9

HAND REWIND STARTER 10-2  
OVERHEAD TYPE STARTER 10-3  
BENDIX TYPE STARTER 10-11

## HAND REWIND STARTER

# 10

MASTER INDEX 10-15

## MASTER INDEX

2-STROKE OIL .....	2-2	RECTIFIER .....	4-37
FILLING .....	2-2	REGULATOR .....	4-37
OIL RECOMMENDATIONS .....	2-2	SYSTEM TESTING .....	4-14
ADDITIONAL INPUTS .....	3-49	CARBURETION .....	3-3
AIR TEMP SENSOR .....	3-39	BASIC FUNCTIONS .....	3-5
REMOVAL & INSTALLATION .....	3-39	CARBURETOR CIRCUITS .....	3-4
TESTING .....	3-39	DUAL-THROAT CARBURETORS .....	3-6
AIR/OIL MIXING VALVE .....	5-7	GENERAL INFORMATION .....	3-3
REMOVAL & INSTALLATION .....	5-7	REMOVING FUEL FROM THE SYSTEM .....	3-6
ALTERNATOR (STATOR) .....	4-40	<b>CARBURETOR SERVICE .....</b>	<b>3-11</b>
CURRENT OUTPUT TEST .....	4-40	DT2 & DT2.2 .....	3-11
VOLTAGE DROP TEST .....	4-40	DT4 & DT5Y .....	3-13
ATMOSPHERIC PRESSURE SENSOR .....	3-39	DT6 & 1988 DT8 .....	3-14
REMOVAL & INSTALLATION .....	3-40	DT9.9, DT15 & 1989-97 DT8 .....	3-16
TESTING .....	3-40	DT20 TO DT85, DT115 & DT140 .....	3-17
BASIC ELECTRICAL THEORY .....	4-2	THROTTLE VALVE SWITCH .....	3-25
HOW ELECTRICITY WORKS .....	4-2	V4 & V6 POWERHEADS .....	3-22
OHM'S LAW .....	4-2	CDI UNIT .....	4-28
BASIC OPERATING PRINCIPLES .....	1-13	DESCRIPTION & OPERATION .....	4-28
2-STROKE MOTORS .....	1-13	REMOVAL & INSTALLATION .....	4-34
4-STROKE MOTORS .....	1-15	TESTING .....	4-28
COMBUSTION .....	1-16	<b>CHARGING CIRCUIT .....</b>	<b>4-38</b>
BATTERY .....		ALTERNATOR (STATOR) .....	4-40
CABLES .....	2-11, 4-43	BATTERY .....	4-40
CHARGERS .....	2-10, 4-43	DESCRIPTION & OPERATION .....	4-38
CLEANING .....	2-9	TROUBLESHOOTING .....	4-39
CONSTRUCTION .....	4-41	CHEMICALS .....	1-17
LOCATION .....	4-41	CLEANERS .....	1-18
MARINE .....	4-40	GENERAL INFORMATION .....	1-17
RATINGS .....	4-41	LUBRICANTS & PENETRANTS .....	1-17
SAFETY PRECAUTIONS .....	2-10, 4-43	SEALANTS .....	1-17
SERVICE .....	4-41	COMBUSTION .....	3-3
SPECIFIC GRAVITY .....	2-9	ABNORMAL COMBUSTION .....	3-3
STORAGE .....	4-44	FACTORS AFFECTING COMBUSTION .....	3-3
TERMINALS .....	2-10, 4-43	GENERAL INFORMATION .....	3-3
BEARINGS .....	6-45	COMPASS .....	1-10
INSPECTION .....	6-45	COMPASS PRECAUTIONS .....	1-11
<b>BENDIX TYPE STARTER .....</b>	<b>10-11</b>	INSTALLATION .....	1-11
DT5, DT6 & DT8 .....	10-11	SELECTION .....	1-10
DT20, DT25 & DT28 .....	10-12	COMPRESSION CHECK .....	2-11
BLEEDING .....	5-3	CHECKING COMPRESSION .....	2-11
<b>BOAT MAINTENANCE .....</b>	<b>2-7</b>	GENERAL INFORMATION .....	2-11
BATTERY .....	2-8	LOW COMPRESSION .....	2-12
FIBERGLASS HULLS .....	2-7	CONDENSER .....	4-10
INSIDE THE BOAT .....	2-7	DESCRIPTION & OPERATION .....	4-10
TRIM TABS, ANODES AND LEAD WIRES .....	2-7	REMOVAL & INSTALLATION .....	4-10
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) .....	1-10	TESTING .....	4-10
ANCHORS .....	1-10	CONNECTING RODS .....	6-42
BAILING DEVICES .....	1-10	INSPECTION .....	6-42
COMPASS .....	1-10	<b>COOLING SYSTEM .....</b>	<b>5-11</b>
FIRST AID KIT .....	1-10	DESCRIPTION & OPERATION .....	5-11
OAR/PADDLE (SECOND MEANS OF PROPULSION) .....	1-10	THERMOSTAT .....	5-13
TOOLS AND SPARE PARTS .....	1-12	TROUBLESHOOTING .....	5-12
VHF-FM RADIO .....	1-10	WATER PUMP .....	5-12
<b>BOATING SAFETY .....</b>	<b>1-4</b>	CRANKSHAFT .....	6-43
COURTESY MARINE EXAMINATIONS .....	1-10	INSPECTION .....	6-44
GENERAL INFORMATION .....	1-4	CYLINDER BLOCK & HEAD .....	6-36
REGULATIONS FOR YOUR BOAT .....	1-4	INSPECTION .....	6-37
REQUIRED SAFETY EQUIPMENT .....	1-5	CYLINDER BORES .....	6-37
BREAKER POINTS .....	4-8	INSPECTION .....	6-37
POINT GAP ADJUSTMENT .....	4-8	REFINISHING .....	6-38
REMOVAL & INSTALLATION .....	4-9	CYLINDER WALL TEMP SENSOR .....	3-37
TESTING .....	4-8	REMOVAL & INSTALLATION .....	3-39
<b>BREAKER POINTS IGNITION (MAGNETO IGNITION) .....</b>	<b>4-7</b>	TESTING .....	3-39
BREAKER POINTS .....	4-8	DETERMINING POWERHEAD CONDITION .....	6-32
CONDENSER .....	4-10	GENERAL INFORMATION .....	6-32
DESCRIPTION & OPERATION .....	4-7	PRIMARY COMPRESSION TEST .....	6-32
IGNITION COIL .....	4-10	SECONDARY COMPRESSION TEST .....	6-33
SYSTEM TESTING .....	4-8	ELECTRICAL COMPONENTS .....	4-2
BUY OR REBUILD? .....	6-33	CONNECTORS .....	4-4
<b>CAPACITOR DISCHARGE IGNITION (CDI) SYSTEM .....</b>	<b>4-11</b>	GROUND .....	4-3
CDI UNIT .....	4-28	LOAD .....	4-3
DESCRIPTION & OPERATION .....	4-11	POWER SOURCE .....	4-2
IGNITION COILS .....	4-25	PROTECTIVE DEVICES .....	4-3
PULSAR/CHARGING/GEAR COUNTER COILS .....	4-14	SWITCHES & RELAYS .....	4-3

# 10-16 MASTER INDEX

WIRING & HARNESSSES	4-3	TESTING	3-47
ELECTRICAL SYSTEM PRECAUTIONS	4-7	FUEL PUMP	3-28
<b>ELECTRONIC FUEL INJECTION</b>	<b>3-33</b>	EXPLODED VIEWS	3-29
ADDITIONAL INPUTS	3-49	HIGH PRESSURE (EFI)	3-48
AIR TEMP SENSOR	3-39	OVERHAUL	3-28
ATMOSPHERIC PRESSURE SENSOR	3-39	REMOVAL & INSTALLATION	3-28
CYLINDER WALL TEMP SENSOR	3-37	<b>FUEL PUMP SERVICE</b>	<b>3-28</b>
DESCRIPTION & OPERATION	3-33	DIAPHRAGM TYPE FUEL PUMPS	3-28
ENGINE SPEED SENSOR	3-46	FUEL SYSTEM	3-3
FUEL INJECTORS	3-46	CARBURETION	3-3
FUEL PRESSURE REGULATOR	3-47	FUEL PUMP	3-7
GEAR COUNTER COIL	3-46	FUEL/WATER SEPARATOR	2-5
HIGH PRESSURE FUEL PUMP	3-48	<b>GAS ASSISTED TILT</b>	<b>8-2</b>
PULSER COIL	3-46	DESCRIPTION & OPERATION	8-2
SELF DIAGNOSTIC SYSTEM	3-49	GAS ASSIST DAMPER	8-2
THROTTLE VALVE SENSOR	3-40	GAS ASSIST DAMPER	8-2
<b>ELECTRONIC IGNITION</b>	<b>4-37</b>	REMOVAL & INSTALLATION	8-2
DESCRIPTION & OPERATION	4-37	TESTING	8-2
WARNING SYSTEMS	4-37	GEAR COUNTER COIL	3-46
ELECTRONIC TOOLS	1-23	TESTING	3-46
BATTERY CHARGERS	1-23	HAND REWIND STARTER	10-2
BATTERY TESTERS	1-23	DESCRIPTION & OPERATION	10-2
GAUGES	1-24	TROUBLESHOOTING	10-2
MULTI-METERS (DVOMS)	1-23	HAND TOOLS	1-19
EMERGENCY STOP SWITCH		BREAKER BARS	1-20
REMOTE CONTROL BOX	9-4	HAMMERS	1-22
TILLER HANDLE	9-9	PLIERS	1-21
<b>ENGINE MAINTENANCE</b>	<b>2-2</b>	SCREWDRIVERS	1-21
2-STROKE OIL	2-2	SOCKET SETS	1-19
FUEL FILTER	2-4	TORQUE WRENCHES	1-20
FUEL/WATER SEPARATOR	2-5	WRENCHES	1-21
LOWER UNIT	2-2	<b>HOW TO USE</b>	<b>1-2</b>
PROPELLER	2-6	AVOIDING THE MOST COMMON MISTAKES	1-3
SERIAL NUMBER IDENTIFICATION	2-2	AVOIDING TROUBLE	1-2
TRIM/TILT & PIVOT POINTS	2-6	CAN YOU DO IT?	1-2
<b>ENGINE MECHANICAL</b>	<b>6-2</b>	DIRECTIONS AND LOCATIONS	1-2
THE TWO-STROKE CYCLE	6-2	GENERAL	1-2
ENGINE SPEED SENSOR	3-46	MAINTENANCE OR REPAIR?	1-2
TESTING	3-46	PROFESSIONAL HELP	1-3
ENGINE START SWITCH	9-10	PURCHASING PARTS	1-3
REMOVAL & INSTALLATION	9-10	WHERE TO BEGIN	1-2
TESTING	9-10	IGNITION COIL(S)	
ENGINE STOP SWITCH		BREAKER POINT	4-10
REMOTE CONTROL BOX	9-4	CDI	4-25
TILLER HANDLE	9-9	IGNITION SWITCH	9-5
<b>FASTENERS, MEASUREMENTS AND CONVERSIONS</b>	<b>1-26</b>	REMOVAL & INSTALLATION	9-5
BOLTS, NUTS AND OTHER THREADED RETAINERS	1-26	TESTING	9-5
STANDARD AND METRIC MEASUREMENTS	1-27	IGNITION SYSTEM	2-16
TORQUE	1-27	<b>JET DRIVE</b>	<b>7-47</b>
<b>FLYWHEEL</b>	<b>6-2</b>	DESCRIPTION & OPERATION	7-47
DT2 & DT2.2	6-2	JET DRIVE ASSEMBLY	7-47
DT4, DT5Y, DT6 & DT8	6-3	MODEL IDENTIFICATION & SERIAL NUMBERS	7-47
DT9.9 & DT15	6-4	JET DRIVE ASSEMBLY	7-47
DT20, DT25 & DT30	6-4	ASSEMBLY	7-54
DT35 & DT40	6-5	CABLE ALIGNMENT & FREE PLAY	7-50
DT55, DT65, DT75 & DT85	6-5	CLEANING & INSPECTION	7-52
DT115, DT140 & V4	6-6	DISASSEMBLY	7-52
V6	6-6	INSTALLATION	7-49
FUEL	3-2	NEUTRAL STOP ADJUSTMENT	7-51
ALCOHOL-BLENDED FUELS	3-2	REMOVAL	7-47
HIGH ALTITUDE OPERATION	3-2	SHIMMING THE JET IMPELLER	7-55
OCTANE RATING	3-2	TRIM ADJUSTMENT	7-52
RECOMMENDATIONS	3-2	WATER PUMP ASSEMBLY	7-55
THE BOTTOM LINE W/FUELS	3-2	<b>LOWER UNIT</b>	
VAPOR PRESSURE & ADDITIVES	3-2	DRAINING AND FILLING	2-3
<b>FUEL AND COMBUSTION</b>	<b>3-2</b>	GENERAL INFORMATION	7-2
COMBUSTION	3-3	LOWER UNIT - NO REVERSE GEAR	7-3
FUEL	3-2	LOWER UNIT - REVERSE GEAR	7-4
FUEL FILTER	2-4	OIL RECOMMENDATIONS	2-3
RELIEVING FUEL SYSTEM PRESSURE	2-4	PROPELLER	7-3
REMOVAL & INSTALLATION	2-5	SHIFTING PRINCIPLES	7-2
FUEL INJECTORS	3-46	TROUBLESHOOTING THE LOWER UNIT	7-2
TESTING	3-46	<b>LOWER UNIT OVERHAUL</b>	<b>7-7</b>
FUEL PRESSURE REGULATOR	3-47	DT2 (FORWARD ONLY)	7-7
REMOVAL & INSTALLATION	3-47	DT4 & DT5Y	7-10

DT6 & DT8	7-12	TILT MOTOR & PUMP	8-4
DT9.9 & DT15	7-15	TILT SWITCH	8-6
DT20, DT25 & DT30	7-20	TROUBLESHOOTING	8-4
DT35 & DT40	7-24	<b>POWER TRIM/TILT</b>	<b>8-6</b>
DT55 & DT65	7-28	DESCRIPTION & OPERATION	8-6
DT75 & DT85	7-33	TRIM/TILT CYLINDER	8-13
DT115 & DT140	7-40	TRIM/TILT MOTOR	8-10
V4 & V6	7-43	TRIM/TILT PUMP	8-8
LOWER UNIT - NO REVERSE GEAR	7-3	TRIM/TILT RELAY	8-16
REMOVAL & INSTALLATION	7-3	TRIM/TILT SWITCH	8-15
LOWER UNIT - WITH REVERSE GEAR	7-4	TROUBLESHOOTING	8-8
REMOVAL & INSTALLATION	7-4	<b>POWERHEAD MECHANICAL</b>	<b>6-6</b>
<b>MANUAL TILT</b>	<b>8-2</b>	DT2 & DT2.2	6-6
DESCRIPTION & OPERATION	8-2	DT4 & DT5Y	6-9
SERVICING	8-2	DT6 & DT8	6-11
MEASURING TOOLS	1-24	DT9.9 & DT15	6-14
DEPTH GAUGES	1-26	DT20, DT25 & DT30	6-18
DIAL INDICATORS	1-25	DT35 & DT40	6-19
MICROMETERS & CALIPERS	1-24	DT50	6-21
TELESCOPING GAUGES	1-26	DT55 & DT65	6-23
NEUTRAL START SWITCH	9-4	DT75 & DT85	6-26
REMOVAL & INSTALLATION	9-4	DT115 & DT140	6-28
TESTING	9-4	V4	6-29
OIL FLOW SENSOR	5-17	V6	6-31
CLEANING & INSPECTION	5-17	POWERHEAD OVERHAUL TIPS	6-34
REMOVAL & INSTALLATION	5-17	CAUTIONS	6-34
TESTING	5-17	CLEANING	6-35
<b>OIL INJECTION SYSTEM</b>	<b>5-2</b>	GENERAL INFORMATION	6-34
AIR/OIL MIXING VALVE	5-7	REPAIRING DAMAGED THREADS	6-35
BLEEDING	5-3	TOOLS	6-34
DESCRIPTION & OPERATION	5-2	POWERHEAD PREPARATION	6-36
OIL LINES	5-5	<b>POWERHEAD RECONDITIONING</b>	<b>6-32</b>
OIL PUMP	5-4	BEARINGS	6-45
OIL PUMP CONTROL ROD	5-9	BUY OR REBUILD?	6-33
OIL PUMP DISCHARGE RATE	5-7	CONNECTING RODS	6-42
OIL TANK	5-3	CRANKSHAFT	6-43
TROUBLESHOOTING	5-2	CYLINDER BLOCK & HEAD	6-36
OIL LEVEL SENSOR	5-16	CYLINDER BORES	6-37
REMOVAL & INSTALLATION	5-16	DETERMINING POWERHEAD CONDITION	6-32
TESTING	5-16	PISTON PINS	6-39
OIL LINES	5-5	PISTON RINGS	6-40
PRECAUTIONS	5-5	PISTONS	6-38
REMOVAL & INSTALLATION	5-5	POWERHEAD OVERHAUL TIPS	6-34
OIL PUMP	5-4	POWERHEAD PREPARATION	6-36
REMOVAL & INSTALLATION	5-4	PROPELLER	7-3
OIL PUMP CONTROL ROD	5-9	GENERAL INFORMATION	2-6
ADJUSTMENT	5-9	REMOVAL & INSTALLATION	7-3
OIL PUMP DISCHARGE RATE	5-7	PULSER COIL	3-46
ADJUSTMENT	5-8	TESTING	3-46
TESTING	5-7	PULSAR/CHARGING/GEAR COUNTER COILS	4-14
OIL TANK	5-3	DESCRIPTION & OPERATION	4-14
CLEANING & INSPECTION	5-4	REMOVAL & INSTALLATION	4-21
REMOVAL & INSTALLATION	5-3	TESTING	4-14
<b>OVERHEAD TYPE STARTER</b>	<b>10-2</b>	RECTIFIER	4-37
DT2, DT2.2, DT4 & DT5Y	10-2	REMOVAL & INSTALLATION	4-37
DT5, DT6 & DT8	10-4	TESTING	4-37
DT9.9 & DT15	10-6	<b>REED VALVE SERVICE</b>	<b>3-26</b>
DT20, DT25 & DT28	10-8	DT2 & DT2.2	3-26
DT25C, DT30C, DT35C & DT40C	10-9	ALL OTHERS	3-26
OVERHEAT SENSOR	5-19	REGULATIONS FOR YOUR BOAT	1-4
REMOVAL & INSTALLATION	5-19	CAPACITY INFORMATION	1-4
TESTING	5-19	CERTIFICATE OF COMPLIANCE	1-5
<b>OVERHEAT WARNING SYSTEM</b>	<b>5-18</b>	DOCUMENTING OF VESSELS	1-4
DESCRIPTION & OPERATION	5-18	HULL IDENTIFICATION NUMBER	1-4
OVERHEAT SENSOR	5-19	LENGTH OF BOATS	1-4
TROUBLESHOOTING	5-18	NUMBERING OF VESSELS	1-4
PISTON PINS	6-39	REGISTRATION OF BOATS	1-4
INSPECTION	6-40	SALES AND TRANSFERS	1-4
PISTON RINGS	6-40	VENTILATION	1-5
INSPECTION	6-41	VENTILATION SYSTEMS	1-5
PISTONS	6-38	REGULATOR	4-37
INSPECTION	6-39	REMOVAL & INSTALLATION	4-27
<b>POWER TILT</b>	<b>8-3</b>	TESTING	4-37
DESCRIPTION & OPERATION	8-3	<b>REMOTE CONTROL BOX</b>	<b>9-2</b>
TILT CYLINDER	8-6	DESCRIPTION & OPERATION	9-2

# 10-18 MASTER INDEX

EMERGENCY STOP SWITCH .....	9-4	REMOVAL & INSTALLATION .....	4-49
ENGINE STOP SWITCH .....	9-4	TESTING .....	4-49
IGNITION SWITCH .....	9-5	<b>STARTING CIRCUIT .....</b>	<b>4-44</b>
NEUTRAL START SWITCH .....	9-4	DESCRIPTION & OPERATION .....	4-44
REMOTE CONTROL BOX .....	9-2	STARTER MOTOR .....	4-45
REMOTE CONTROL CABLES .....	9-2	STARTER MOTOR RELAY SWITCH .....	4-48
REMOVAL & INSTALLATION .....	9-2	TROUBLESHOOTING .....	4-44
TRIM/TILT SWITCH .....	9-6	STATOR .....	4-40
TROUBLESHOOTING .....	9-2	CURRENT OUTPUT TEST .....	4-40
WARNING BUZZER .....	9-6	VOLTAGE DROP TEST .....	4-40
REMOTE CONTROL CABLES .....	9-2	TEST EQUIPMENT .....	4-4
ADJUSTMENT .....	9-3	JUMPER WIRES .....	4-4
REMOVAL & INSTALLATION .....	9-2	MULTI-METERS .....	4-5
REQUIRED SAFETY EQUIPMENT .....	1-5	TEST LIGHTS .....	4-5
FIRE EXTINGUISHERS .....	1-6	TESTING .....	4-6
PERSONAL FLOTATION DEVICES .....	1-7	OPEN CIRCUITS .....	4-6
SOUND PRODUCING DEVICES .....	1-8	RESISTANCE .....	4-6
TYPES OF FIRES .....	1-5	SHORT CIRCUITS .....	4-7
VISUAL DISTRESS SIGNALS .....	1-8	VOLTAGE .....	4-6
WARNING SYSTEM .....	1-7	VOLTAGE DROP .....	4-6
<b>SAFETY IN SERVICE .....</b>	<b>1-12</b>	THERMOSTAT .....	5-13
DO'S .....	1-12	CLEANING & INSPECTION .....	5-14
DON'TS .....	1-12	REMOVAL & INSTALLATION .....	5-13
GENERAL .....	1-12	THROTTLE CABLE .....	9-9
SAFETY TOOLS .....	1-16	ADJUSTMENT .....	9-9
EYE AND EAR PROTECTION .....	1-16	REMOVAL & INSTALLATION .....	9-9
WORK CLOTHES .....	1-17	THROTTLE VALVE SENSOR .....	3-40
WORK GLOVES .....	1-16	ADJUSTMENT .....	3-42
SELF DIAGNOSTIC SYSTEM .....	3-49	REMOVAL & INSTALLATION .....	3-46
DIAGNOSIS PROCEDURE .....	3-494	TESTING .....	3-40
FAIL SAFE EMERGENCY BACKUP .....	3-49	THROTTLE VALVE SWITCH .....	3-25
TROUBLE CODES .....	3-49	DESCRIPTION & OPERATION .....	3-25
SERIAL NUMBER IDENTIFICATION .....	2-2	SERVICE .....	3-26
SHIFTING PRINCIPLES .....	7-2	<b>TILLER HANDLE .....</b>	<b>9-7</b>
COUNTER-ROTATING UNIT .....	7-2	DESCRIPTION & OPERATION .....	9-7
STANDARD ROTATING UNIT .....	7-2	ENGINE START SWITCH .....	9-10
<b>SHOP EQUIPMENT .....</b>	<b>1-16</b>	EMERGENCY STOP SWITCH .....	9-9
CHEMICALS .....	1-17	ENGINE STOP SWITCH .....	9-9
SAFETY TOOLS .....	1-16	REMOVAL & INSTALLATION .....	9-7
SPARK PLUG WIRES .....	2-16	THROTTLE CABLE .....	9-9
REMOVAL & INSTALLATION .....	2-16	TILLER HANDLE .....	9-7
TESTING .....	2-16	TROUBLESHOOTING .....	9-7
SPARK PLUGS .....	2-12	ENGINE START SWITCH .....	9-10
GENERAL INFORMATION .....	2-12	TILT CYLINDER .....	8-6
INSPECTION & GAPPING .....	2-15	OVERHAUL .....	8-6
READING SPARK PLUGS .....	2-15	REMOVAL & INSTALLATION .....	8-6
REMOVAL & INSTALLATION .....	2-13	TILT MOTOR & PUMP .....	8-4
SPARK PLUG HEAT RANGE .....	2-12	BLEEDING THE SYSTEM .....	8-4
SPARK PLUG SERVICE .....	2-13	CHECKING FLUID LEVEL .....	8-4
<b>SPECIFICATIONS .....</b>		OVERHAUL .....	8-6
CAPACITIES .....	2-48	REMOVAL & INSTALLATION .....	8-5
CARBURETOR .....	3-52	TESTING .....	8-5
CARBURETOR IDLE SCREW .....	2-34	TILT SWITCH .....	8-6
CONVERSION FACTORS .....	1-27	TILT/TRIM .....	
ENGINE REBUILDING .....	6-48	MANUAL TILT .....	8-2
ENGINE TORQUE .....	6-46	POWER TILT .....	8-3
GENERAL ENGINE .....	2-36	POWER TRIM/TILT .....	8-6
IGNITION COIL .....	4-50	TIMING AND SYNCHRONIZATION .....	2-16
MAINTENANCE INTERVALS .....	2-45	PREPARATION .....	2-17
SERIAL NUMBER IDENTIFICATION .....	2-41	SYNCHRONIZATION .....	2-16
TUNE-UP .....	2-35	TIMING .....	2-16
TYPICAL TORQUE VALUES - METRIC BOLTS .....	1-28	<b>TOOLS .....</b>	<b>1-18</b>
TYPICAL TORQUE VALUES - U.S. STANDARD BOLTS .....	1-28	ELECTRONIC TOOLS .....	1-23
<b>SPRING COMMISSIONING CHECKLIST .....</b>	<b>2-32</b>	HAND TOOLS .....	1-19
<b>STARTER .....</b>		MEASURING TOOLS .....	1-24
BENDIX TYPE .....	10-11	OTHER COMMON TOOLS .....	1-22
HAND REWIND .....	10-2	SPECIAL TOOLS .....	1-23
OVERHEAD .....	10-2	TRIM/TILT .....	
STARTER MOTOR .....	4-45	MANUAL TILT .....	8-2
DESCRIPTION & OPERATION .....	4-45	POWER TILT .....	8-3
OVERHAUL .....	4-48	POWER TRIM/TILT .....	8-6
REMOVAL & INSTALLATION .....	4-47	TRIM/TILT CYLINDER .....	8-13
TESTING .....	4-45	ASSEMBLY .....	8-15
STARTER MOTOR RELAY SWITCH .....	4-48	CLEANING & INSPECTION .....	8-15
DESCRIPTION & OPERATION .....	4-48	DISASSEMBLY .....	8-15

REMOVAL & INSTALLATION .....	8-14	DT55 AND DT65 MOTORS .....	2-25
TESTING .....	8-13	DT75 AND DT85 MOTORS .....	2-28
TRIM/TILT MOTOR .....	8-10	DT90 AND DT100 MOTORS .....	2-29
ASSEMBLY .....	8-13	DT115 AND DT140 MOTORS .....	2-29
CLEANING AND INSPECTION .....	8-12	DT150, DT175, DT200 MOTORS .....	2-31
DISASSEMBLY .....	8-11	IGNITION SYSTEM .....	2-16
REMOVAL & INSTALLATION .....	8-10	INTRODUCTION .....	2-11
TESTING .....	8-10	SPARK PLUG WIRES .....	2-16
TRIM/TILT PUMP .....	8-8	SPARK PLUGS .....	2-12
REMOVAL & INSTALLATION .....	8-9	TIMING AND SYNCHRONIZATION .....	2-16
TESTING .....	8-8	TUNE-UP SEQUENCE .....	2-11
TRIM/TILT RELAY .....	8-16	TUNE-UP SEQUENCE .....	2-11
REMOVAL & INSTALLATION .....	8-18	<b>UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS . 4-2</b>	
TESTING .....	8-16	BASIC ELECTRICAL THEORY .....	4-2
TRIM/TILT SWITCH .....	8-15,	ELECTRICAL COMPONENTS .....	4-2
9-6		ELECTRICAL SYSTEM PRECAUTIONS .....	4-7
REMOVAL & INSTALLATION .....	9-6	TEST EQUIPMENT .....	4-4
TESTING .....	9-6	TESTING .....	4-6
TRIM/TILT & PIVOT POINTS .....	2-6	TROUBLESHOOTING .....	4-6
INSPECTION AND LUBRICATION .....	2-6	WIRE AND CONNECTOR REPAIR .....	4-7
<b>TROUBLESHOOTING .....</b>	<b>1-13</b>	WARNING BUZZER .....	9-6
BASIC OPERATING PRINCIPLES .....	1-13	REMOVAL & INSTALLATION .....	9-7
CHARGING SYSTEM .....	4-39	TESTING .....	9-6
COMBUSTION RELATED PISTON FAILURES .....	3-11	<b>WARNING SYSTEMS</b>	
COOLING SYSTEM .....	5-11	BATTERY VOLTAGE .....	4-38
ELECTRICAL SYSTEM .....	4-6	DESCRIPTION & OPERATION .....	5-14
FUEL LINE .....	3-10	OIL FLOW .....	4-38
FUEL PUMP .....	3-9	OIL FLOW SENSOR .....	5-17
FUEL SYSTEM .....	3-8	OIL LEVEL .....	4-37
GENERAL INFORMATION .....	1-13	OIL LEVEL SENSOR .....	5-16
LOWER UNIT .....	7-2	OVER REVOLUTION .....	4-37
OIL INJECTION SYSTEM .....	5-2	OVERHEAT .....	4-38
OVERHEAT WARNING SYSTEM .....	5-18	TROUBLESHOOTING .....	5-15
POWER TILT SYSTEM .....	8-4	WATER PUMP .....	5-12
POWER TRIM/TILT SYSTEM .....	8-8	CLEANING & INSPECTION .....	5-13
REMOTE CONTROLS .....	9-2	REMOVAL & INSTALLATION .....	5-12
STARTING SYSTEM .....	4-44	<b>WINTER STORAGE CHECKLIST .....</b>	<b>2-32</b>
TILLER HANDLE .....	9-7	WIRE AND CONNECTOR REPAIR .....	4-7
WARNING SYSTEMS .....	5-14	<b>WIRING DIAGRAMS</b>	
<b>TUNE-UP .....</b>	<b>2-11</b>	INDEX .....	4-51
COMPRESSION CHECK .....	2-11	1 CYLINDER .....	4-52
DT2 AND DT2.2 MOTORS .....	2-17	2 & 3 CYLINDER .....	4-55
DT4 AND DT5Y MOTORS .....	2-18	4 CYLINDER .....	4-90
DT6 AND DT8 MOTORS .....	2-19	V4 .....	4-88
DT9.9 AND DT15 MOTORS .....	2-20	V6 .....	4-95
DT20, DT25 AND DT30 MOTORS .....	2-21		
DT35 AND DT40 MOTORS .....	2-22		