



Presents

# Repair Manuals from **SELOC.**

## Contents of this manual:

---

|          |  |   |       |
|----------|--|---|-------|
| <b>1</b> | <b>GENERAL INFORMATION,<br/>SAFETY AND TOOLS</b> | HOW TO USE THIS MANUAL                              | 1-2   |
|          |  | BOATING SAFETY                                      | 1-4   |
|          |  | BOATING EQUIPMENT (NOT REQUIRED<br>BUT RECOMMENDED) | 1-10  |
|          |  | SAFETY IN SERVICE                                   | 1-13  |
|          |  | TROUBLESHOOTING                                     | 1-13  |
|          |  | SHOP EQUIPMENT                                      | 1-17  |
|          |  | TOOLS   | 1-19  |
|          |  | FASTENERS, MEASUREMENT, AND CONVERSIONS             | 1-27  |
|          |  | SPECIFICATIONS                                      | 1-28  |
|          |  | <hr/>   |       |
| <b>2</b> | <b>MAINTENANCE AND<br/>TUNE-UP</b>               | GENERAL INFORMATION                                 | 2-2   |
|          |  | LUBRICATION   | 2-6   |
|          |  | ENGINE MAINTENANCE                                  | 2-12  |
|          |  | BOAT MAINTENANCE                                    | 2-32  |
|          |  | TUNE-UP   | 2-36  |
|          |  | TIMING AND SYNCHRONIZATION                          | 2-49  |
|          |  | VALVE CLEARANCE                                     | 2-94  |
|          |  | STORAGE   | 2-108 |
|          |  | CLEARING A SUBMERGED MOTOR                          | 2-112 |
|          |  | SPECIFICATIONS                                      | 2-113 |
| <hr/>    |  |   |       |
| <b>3</b> | <b>FUEL SYSTEM</b>                               | FUEL AND COMBUSTION BASICS                          | 3-2   |
|          |  | FUEL TANK AND LINES                                 | 3-6   |
|          |  | CARBURETED FUEL SYSTEM                              | 3-11  |
|          |  | CARBURETOR SERVICE                                  | 3-17  |
|          |  | ELECTRONIC FUEL INJECTION                           | 3-50  |
|          |  | FUEL PUMP (LOW PRESSURE) SERVICE                    | 3-97  |
|          |  | SPECIFICATIONS                                      | 3-105 |
| <hr/>    |  |   |       |
| <b>4</b> | <b>IGNITION AND ELECTRICAL</b>                   | ELECTRICAL SYSTEMS                                  | 4-2   |
|          |  | IGNITION SYSTEMS                                    | 4-8   |
|          |  | CHARGING SYSTEM                                     | 4-35  |
|          |  | CRANKING SYSTEM                                     | 4-39  |
|          |  | ELECTRICAL SWITCH/SOLENOID SERVICE                  | 4-51  |
|          |  | SPECIFICATIONS                                      | 4-54  |
|          |  | WIRING DIAGRAMS                                     | 4-62  |
| <hr/>    |  |   |       |
| <b>5</b> | <b>LUBRICATION AND COOLING</b>                   | LUBRICATION SYSTEM                                  | 5-2   |
|          |  | COOLING SYSTEM                                      | 5-10  |
|          |  | SPECIFICATIONS                                      | 5-31  |

# CONTENTS

POWERHEAD MECHANICAL 6-2  
POWERHEAD REFINISHING 6-121  
POWERHEAD BREAK-IN 6-136  
SPECIFICATIONS 6-137

## POWERHEAD

# 6

LOWER UNIT 7-2  
GEARCASE SERVICE - YAMAHA 7-5  
GEARCASE SERVICE - MERCURY/MARINER 7-59  
JET DRIVE 7-87

## LOWER UNIT

# 7

YAMAHA HYDRO TILT LOCK SYSTEM 8-2  
YAMAHA TRIM & TILT SYSTEMS 8-2  
YAMAHA SINGLE TILT RAM POWER TRIM/TILT SYSTEMS 8-3  
YAMAHA LARGE MOTOR POWER TRIM/TILT SYSTEM 8-15  
MERCURY/MARINER TRIM & TILT SYSTEMS 8-28  
MERCURY/MARINER GAS ASSIST TILT SYSTEM 8-31  
MERCURY/MARINER SINGLE RAM INTEGRAL POWER TILT/TRIM 8-35

## TRIM AND TILT

# 8

YAMAHA REMOTE CONTROLS 9-2  
MERCURY/MARINER REMOTE CONTROLS 9-12  
TILLER HANDLE 9-16  
WIRING DIAGRAMS - YAMAHA 9-20  
WIRING DIAGRAMS - MERCURY/MARINER 9-21

## REMOTE CONTROL

# 9

HAND REWIND STARTER 10-2

## HAND REWIND STARTER

# 10

MASTER INDEX 10-19

## MASTER INDEX

|  |              |  |             |
|--|--------------|--|-------------|
| ANODES (ZINCS) .....                                       | 2-29         | CHECKING THE BATTERY .....                           | 2-45        |
| INSPECTION .....   | 2-29         | CHECKING THE INTERNAL WIRING HARNESS .....           | 2-46        |
| SERVICING .....  | 2-30         | CHECKING THE STARTER .....                           | 2-46        |
| <b>BOAT MAINTENANCE</b> .....                              | <b>2-32</b>  | <b>ELECTRICAL SWITCH/SOLENOID SERVICE</b> .....      | <b>4-51</b> |
| BATTERIES .....  | 2-32         | KILL SWITCH .....                                    | 4-51        |
| FIBERGLASS HULL .....                                      | 2-35         | MERCURY MAIN KEYSWITCH .....                         | 4-51        |
| INTERIOR .....   | 2-35         | NEUTRAL SAFETY SWITCH .....                          | 4-52        |
| <b>CLEARING A SUBMERGED MOTOR</b> .....                    | <b>2-112</b> | START BUTTON .....                                   | 4-52        |
| BATTERY .....  | 4-37         | YAMAHA MAIN KEYSWITCH .....                          | 4-51        |
| CABLES .....   | 4-39         | WARNING BUZZER/HORN .....                            | 4-53        |
| CHARGERS .....   | 4-39         | <b>ELECTRONIC FUEL INJECTION</b> .....               | <b>3-50</b> |
| CONSTRUCTION .....   | 4-38         | COMPONENT LOCATIONS .....                            | 3-86        |
| MARINE BATTERIES .....                                     | 4-37         | CONTROLLED COMBUSTION SYSTEM .....                   | 3-52        |
| LOCATION .....   | 4-38         | CRANKSHAFT POSITION SENSOR (CPS)/PULSER COIL .....   | 3-80        |
| PRECAUTIONS .....  | 4-38         | ELECTRIC LOW-PRESSURE FUEL PUMP (V6 ONLY) .....      | 3-68        |
| RATINGS .....  | 4-38         | ENGINE CONTROL MODULE (ECM/CDI) .....                | 3-77        |
| <b>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)</b> .. | <b>1-10</b>  | FUEL DISTRIBUTION MANIFOLD (MERCURY/MARINER) .....   | 3-76        |
| ANCHORS .....  | 1-10         | FUEL FLOW SCHEMATICS .....                           | 3-95        |
| BAILING DEVICES .....                                      | 1-10         | FUEL INJECTION BASICS .....                          | 3-50        |
| COMPASS .....  | 1-11         | FUEL INJECTORS .....                                 | 3-72        |
| FIRST AID KIT .....  | 1-10         | FUEL PRESSURE REGULATOR .....                        | 3-76        |
| OAR/PADDLE (SECOND MEANS OF PROPULSION) .....              | 1-10         | IDLE SPEED/AIR CONTROL (ISC/IAC) VALVE .....         | 3-84        |
| TOOLS AND SPARE PARTS .....                                | 1-12         | MERCURY/MARINER EFI .....                            | 3-51        |
| VHF-FM RADIO .....   | 1-10         | MERCURY/MARINER TROUBLESHOOTING CHARTS .....         | 3-55        |
| <b>BOATING SAFETY</b> .....                                | <b>1-4</b>   | NEUTRAL OR SHIFT POSITION SWITCHES .....             | 3-84        |
| COURTESY MARINE EXAMINATIONS .....                         | 1-10         | PRESSURE SENSORS (IAP/MAP) .....                     | 3-83        |
| REGULATIONS FOR YOUR BOAT .....                            | 1-4          | SELF DIAGNOSTIC SYSTEM .....                         | 3-53        |
| REQUIRED SAFETY EQUIPMENT .....                            | 1-6          | SENSOR AND CIRCUIT RESISTANCE/OUTPUT TESTS .....     | 3-57        |
| <b>CARBURETED FUEL SYSTEM</b> .....                        | <b>3-11</b>  | TEMPERATURE SENSORS .....                            | 3-80        |
| DESCRIPTION AND OPERATION .....                            | 3-11         | THROTTLE BODY AND INTAKE ASSEMBLY .....              | 3-61        |
| TROUBLESHOOTING .....                                      | 3-14         | THROTTLE POSITION SENSOR (TPS) .....                 | 3-78        |
| <b>CARBURETOR SERVICE</b> .....                            | <b>3-17</b>  | TROUBLESHOOTING .....                                | 3-52        |
| CARBURETOR IDENTIFICATION .....                            | 3-17         | VAPOR SEPARATOR TANK (VST) AND HIGH-PRESSURE         |             |
| 2.5 HP YAMAHA .....  | 3-17         | FUEL PUMP .....                                      | 3-69        |
| 4 HP YAMAHA .....  | 3-18         | YAMAHA EFI .....                                     | 3-50        |
| 4/5/6 HP MERCURY/MARINER .....                             | 3-21         | <b>ELECTRONIC IGNITION SYSTEMS</b> .....             | 2-45        |
| 6/8 HP YAMAHA .....  | 3-23         | ENGINE COVERS .....                                  | 2-12        |
| 8/9.9 HP (232cc) .....                                     | 3-24         | ENGINE IDENTIFICATION .....                          | 2-2         |
| 9.9/15 HP (323cc) .....                                    | 3-28         | ENGINE IDS .....                                     | 2-2         |
| 25 HP MODELS .....   | 3-30         | ENGINE MODEL & SERIAL NUMBERS .....                  | 2-3         |
| 30/40 HP MODELS .....                                      | 3-33         | <b>ENGINE MAINTENANCE</b> .....                      | <b>2-12</b> |
| 40/45/50 HP (935cc) .....                                  | 3-35         | ANODES (ZINCS) .....                                 | 2-29        |
| 40/50/60 HP (996cc) .....                                  | 3-35         | COOLING SYSTEM .....                                 | 2-13        |
| 75/80/90/100 HP .....                                      | 3-44         | ENGINE COVERS .....                                  | 2-12        |
| CDI/TCI UNIT AND IGNITION COILS .....                      | 4-28         | ENGINE OIL AND FILTER (4-STROKE) .....               | 2-15        |
| REMOVAL & INSTALLATION .....                               | 4-28         | FUEL FILTER .....                                    | 2-19        |
| <b>CHARGING SYSTEM</b> .....                               | <b>4-35</b>  | JET DRIVE IMPELLER .....                             | 2-28        |
| BATTERY .....  | 4-37         | PROPELLER .....                                      | 2-21        |
| CHARGING CIRCUIT .....                                     | 4-35         | TIMING BELT .....                                    | 2-31        |
| CHARGING SYSTEMS .....                                     | 4-35         | ENGINE OIL AND FILTER .....                          | 2-15        |
| CLEARING A SUBMERGED MOTOR .....                           | 2-112        | CHECKING OIL LEVEL .....                             | 2-15        |
| COMPRESSION TESTING .....                                  | 2-37         | OIL CHANGE & FILTER SERVICE .....                    | 2-16        |
| COMPRESSION CHECK .....                                    | 2-37         | OIL RECOMMENDATIONS .....                            | 2-15        |
| LOW COMPRESSION .....                                      | 2-38         | EXHAUST COVER .....                                  | 6-123       |
| CONNECTING RODS .....                                      | 6-125        | <b>FASTENERS, MEASUREMENTS AND CONVERSIONS</b> ..... | <b>1-27</b> |
| <b>COOLING SYSTEM</b> .....                                | <b>5-10</b>  | BOLTS, NUTS AND OTHER THREADED RETAINERS .....       | 1-27        |
| DESCRIPTION AND OPERATION .....                            | 5-11         | TORQUE .....   | 1-27        |
| FLUSHING JET DRIVES .....                                  | 2-15         | STANDARD AND METRIC MEASUREMENTS .....               | 1-27        |
| FLUSHING THE COOLING SYSTEM .....                          | 2-13         | FLYWHEEL AND STATOR .....                            | 4-21        |
| THERMOSTAT .....   | 5-27         | CLEANING & INSPECTION .....                          | 4-27        |
| THERMO-SWITCH .....  | 5-28         | REMOVAL & INSTALLATION .....                         | 4-21        |
| TROUBLESHOOTING .....                                      | 5-12         | FUEL .....   | 3-2         |
| WATER PUMP .....   | 5-14         | ALCOHOL-BLENDED FUELS .....                          | 3-3         |
| <b>CRANKING SYSTEM</b> .....                               | <b>4-39</b>  | CHECKING FOR STALE/CONTAMINATED FUEL .....           | 3-3         |
| STARTING CIRCUITS .....                                    | 4-39         | HIGH ALTITUDE OPERATION .....                        | 3-3         |
| STARTER MOTOR .....  | 4-43         | OCTANE RATING .....                                  | 3-2         |
| STARTER MOTOR CIRCUIT .....                                | 4-40         | THE BOTTOM LINE WITH FUELS .....                     | 3-3         |
| STARTER MOTOR RELAY/SOLENOID .....                         | 4-42         | VAPOR PRESSURE .....                                 | 3-3         |
| CRANKSHAFT .....   | 6-123        | <b>FUEL AND COMBUSTION BASICS</b> .....              | <b>3-2</b>  |
| CRANKSHAFT POSITION SENSOR (CPS) .....                     | 4-32         | COMBUSTION .....                                     | 3-5         |
| DESCRIPTION & OPERATION .....                              | 4-32         | FUEL .....   | 3-2         |
| GAP ADJUSTMENT & SERVICE .....                             | 4-32         | FUEL SYSTEM PRESSURIZATION .....                     | 3-4         |
| CYLINDER BLOCK .....                                       | 6-128        | FUEL SYSTEM SERVICE CAUTIONS .....                   | 3-2         |
| CYLINDER HEAD .....  | 6-132        | FUEL FILTER .....                                    | 2-19        |
| ELECTRICAL SYSTEM CHECKS .....                             | 2-45         | FUEL INJECTORS .....                                 | 3-72        |

# 10-20 MASTER INDEX

|   |             |   |              |
|---|-------------|---|--------------|
| REMOVAL & INSTALLATION .....                          | 3-73        | FLYWHEEL AND STATOR   |              |
| TESTING .....   | 3-73        | (STATOR/CHARGE/LIGHTING/PULSER COILS) .....                     | 4-21         |
| FUEL LINES AND FITTINGS .....                         | 3-8         | THERMO-SENSOR & THERMO-SWITCH .....                             | 4-32         |
| <b>FUEL PUMP (LOW-PRESSURE) SERVICE .....</b>         | <b>3-97</b> | TROUBLESHOOTING .....   | 4-12         |
| FUEL PUMPS .....                                      | 3-97        | YAMAHA MICROCOMPUTER IGNITION SYSTEMS (YMIS) .....              | 4-31         |
| PLUNGER ACTUATED FUEL PUMPS .....                     | 3-100       | <b>JET DRIVE .....</b>  | <b>7-87</b>  |
| FUEL PRESSURE REGULATOR .....                         | 3-76        | BEARING .....   | 2-10         |
| REMOVAL & INSTALLATION .....                          | 3-77        | ADJUSTMENTS .....   | 7-96         |
| TESTING .....   | 3-76        | ASSEMBLY .....  | 7-87         |
| FUEL SYSTEM CHECKS .....                              | 2-46        | IMPELLER .....  | 2-28         |
| FUEL SYSTEM PRESSURIZATION .....                      | 3-4         | JET DRIVE ADJUSTMENTS .....                                     | 7-96         |
| PRESSURIZING (CHECKING FOR LEAKS) .....               | 3-5         | JET DRIVE ASSEMBLY .....  | 7-87         |
| RELIEVING PRESSURE (EFI) .....                        | 3-4         | ASSEMBLY .....  | 7-93         |
| <b>FUEL TANK AND LINES .....</b>                      | <b>3-6</b>  | CLEANING & INSPECTING .....                                     | 7-90         |
| FUEL LINES AND FITTINGS .....                         | 3-8         | DESCRIPTION & OPERATION .....                                   | 7-87         |
| FUEL TANK .....                                       | 3-6         | MODEL IDENTIFICATION .....                                      | 7-88         |
| <b>GAS ASSIST TILT SYSTEM - MERCURY/MARINER .....</b> | <b>8-31</b> | REMOVAL & DISASSEMBLY .....                                     | 7-88         |
| DESCRIPTION & OPERATION .....                         | 8-31        | TRIM ADJUSTMENT .....   | 7-100        |
| GAS ASSIST DAMPER .....                               | 8-31        | JET DRIVE BEARING .....   | 2-10         |
| GEARCASE (LOWER UNIT) OIL .....                       | 2-9         | DAILY BEARING LUBRICATION .....                                 | 2-11         |
| CHECKING OIL LEVEL .....                              | 2-9         | GREASE REPLACEMENT .....  | 2-11         |
| DRAINING AND FILLING .....                            | 2-10        | RECOMMENDED LUBRICANT .....                                     | 2-10         |
| OIL RECOMMENDATIONS .....                             | 2-9         | JET DRIVE IMPELLER .....  | 2-28         |
| <b>GEARCASE SERVICE - MERCURY/MARINER .....</b>       | <b>7-59</b> | <b>LOWER UNIT .....</b>   | <b>7-2</b>   |
| REPAIR AND OVERHAUL TIPS .....                        | 7-59        | EXHAUST GASES .....   | 7-4          |
| 4/5/6 HP (1-CYL) .....                                | 7-60        | GENERAL INFORMATION .....                                       | 7-2          |
| 8-15 HP (2-CYL) .....                                 | 7-64        | SHIFTING PRINCIPLES .....                                       | 7-2          |
| 25 HP (BIGFOOT) .....                                 | 7-70        | TROUBLESHOOTING .....   | 7-4          |
| 30/40 HP (NON-BIGFOOT) .....                          | 7-70        | LUBRICANTS .....  | 2-6          |
| 40/45/50 HP (NON-BIGFOOT, 935cc) .....                | 7-70        | <b>LUBRICATION .....</b>  | <b>2-6</b>   |
| 30-115 HP (BIGFOOT) .....                             | 7-74        | GEARCASE (LOWER UNIT) OIL .....                                 | 2-9          |
| 40/50/60 HP (996cc) .....                             | 7-74        | JET DRIVE BEARING .....   | 2-10         |
| 75-115 HP (NON-BIGFOOT) .....                         | 7-74        | LUBRICANTS .....  | 2-6          |
| V6 MODELS .....                                       | 7-87        | LUBRICATING THE MOTOR .....                                     | 2-7          |
| <b>GEARCASE SERVICE - YAMAHA .....</b>                | <b>7-5</b>  | LUBRICATION INSIDE THE BOAT .....                               | 2-8          |
| REPAIR AND OVERHAUL TIPS .....                        | 7-5         | POWER TRIM/TILT RESERVOIR .....                                 | 2-11         |
| 2.5 AND 4 HP (1-CYL) .....                            | 7-5         | <b>LUBRICATION SYSTEM .....</b>                                 | <b>5-2</b>   |
| 6-40 HP (2- AND 3-CYL) .....                          | 7-13        | DESCRIPTION AND OPERATION .....                                 | 5-2          |
| 40-225 HP (4- AND 6-CYL) .....                        | 7-35        | OIL PRESSURE .....  | 5-2          |
| <b>GENERAL INFORMATION .....</b>                      | <b>2-2</b>  | OIL PRESSURE SWITCH/SENSOR .....                                | 5-3          |
| BEFORE/AFTER EACH USE .....                           | 2-4         | OIL PUMP .....  | 5-5          |
| ENGINE IDENTIFICATION .....                           | 2-2         | NEUTRAL OR SHIFT POSITION SWITCHES .....                        | 3-84         |
| MAINTENANCE COVERAGE IN THIS MANUAL .....             | 2-2         | OIL PRESSURE SWITCH/SENSOR .....                                | 5-3          |
| MAINTENANCE EQUALS SAFETY .....                       | 2-2         | DESCRIPTION & OPERATION .....                                   | 5-3          |
| OUTBOARDS ON SAIL BOATS .....                         | 2-2         | REMOVAL & INSTALLATION .....                                    | 5-4          |
| <b>HAND REWIND STARTERS .....</b>                     | <b>10-2</b> | TESTING .....   | 5-3          |
| 2.5 HP AND 4 HP YAMAHA .....                          | 10-2        | OIL PUMP .....  | 5-5          |
| 4/5/6 HP MERCURY/MARINER .....                        | 10-3        | REMOVAL, OVERHAUL & INSTALLATION .....                          | 5-5          |
| 6/8 HP YAMAHA .....                                   | 10-4        | PISTONS .....   | 6-126        |
| 8/9.9 HP (232cc) .....                                | 10-6        | POWER TRIM/TILT RESERVOIR .....                                 | 2-11         |
| 9.9/15 HP (323cc) .....                               | 10-11       | CHECKING FLUID LEVEL .....                                      | 2-11         |
| 25 HP YAMAHA .....                                    | 10-13       | RECOMMENDED LUBRICANT .....                                     | 2-11         |
| 25-40 HP MERCURY/MARINER .....                        | 10-13       | <b>POWER TRIM/TILT SYSTEM - YAMAHA (LARGE MOTOR) .....</b>      | <b>8-15</b>  |
| 30/40J/40 HP YAMAHA .....                             | 10-16       | DESCRIPTION & OPERATION .....                                   | 8-15         |
| <b>HOW TO USE THIS MANUAL .....</b>                   | <b>1-2</b>  | MAINTENANCE .....   | 8-16         |
| AVOIDING THE MOST COMMON MISTAKES .....               | 1-4         | POWER TRIM/TILT SWITCH .....                                    | 8-20         |
| AVOIDING TROUBLE .....                                | 1-2         | PTT ASSEMBLY (DUAL TRIM RAM) .....                              | 8-22         |
| CAN YOU DO IT? .....                                  | 1-2         | TRIM SENSOR .....   | 8-21         |
| DIRECTIONS AND LOCATIONS .....                        | 1-3         | TRIM/TILT MOTOR .....   | 8-21         |
| MAINTENANCE OR REPAIR? .....                          | 1-2         | TRIM/TILT RELAY .....   | 8-19         |
| PROFESSIONAL HELP .....                               | 1-3         | TROUBLESHOOTING .....   | 8-17         |
| PURCHASING PARTS .....                                | 1-3         | <b>POWERHEAD BREAK-IN .....</b>                                 | <b>6-136</b> |
| WHERE TO BEGIN .....                                  | 1-2         | BREAK-IN PROCEDURES .....                                       | 6-136        |
| WHY COMBINE YAMAHA AND MERCURY/MARINER? .....         | 1-2         | <b>POWERHEAD MECHANICAL .....</b>                               | <b>6-2</b>   |
| <b>HYDRO TILT LOCK SYSTEM - YAMAHA .....</b>          | <b>8-2</b>  | GENERAL INFORMATION .....                                       | 6-2          |
| DESCRIPTION & OPERATION .....                         | 8-2         | 2.5 HP AND 4 HP YAMAHA .....                                    | 6-4          |
| SERVICING .....                                       | 8-3         | 4/5/6 HP MERCURY/MARINER .....                                  | 6-12         |
| IDLE SPEED ADJUSTMENT .....                           | 2-48        | 6/8 HP YAMAHA AND ALL 8/9.9 HP (232cc) .....                    | 6-18         |
| IDLE SPEED/AIR CONTROL (ISC/IAC) VALVE .....          | 3-84        | 9.9/15 HP (323cc) .....   | 6-36         |
| REMOVAL & INSTALLATION .....                          | 3-84        | 25 HP .....   | 6-45         |
| <b>IGNITION SYSTEMS .....</b>                         | <b>4-8</b>  | 30/40 HP 3-CYLINDER .....                                       | 6-56         |
| CDI/TCI/DIGITAL INDUCTIVE IGNITION SYSTEMS .....      | 4-8         | FOUR-CYLINDER 40/45/50 HP (935cc) AND 30/40/60 HP (966cc) ..... | 6-66         |
| CDI/TCI UNIT AND IGNITION COILS .....                 | 4-28        | 75/80/90/100 HP AND 115 HP POWERHEADS .....                     | 6-81         |
| CRANKSHAFT POSITION SENSOR (CPS) .....                | 4-32        | 150 HP YAMAHA .....   | 6-97         |
|   |             | 200/225 HP V6 .....   | 6-107        |

|  |              |   |              |
|--|--------------|---|--------------|
| <b>POWERHEAD REFINISHING</b> .....                                 | <b>6-121</b> | IGNITION SYSTEM - V-ENGINES .....       | 4-56         |
| CONNECTING RODS .....  | 6-125        | LUBRICATION .....                       | 2-117        |
| CRANKSHAFT .....   | 6-123        | MAINTENANCE .....                       | 2-116        |
| CYLINDER BLOCK .....   | 6-128        | POWERHEAD .....                         | 6-137        |
| CYLINDER HEAD COMPONENTS (CAMSHAFT/VALVE TRAIN) .....              | 6-132        | TUNE-UP .....                           | 2-119        |
| EXHAUST COVER .....  | 6-123        | VALVE CLEARANCE - YAMAHA .....          | 2-121        |
| GENERAL INFORMATION .....  | 6-121        | VALVE CLEARANCE - MERCURY/MARINER ..... | 2-121        |
| PISTONS .....  | 6-126        | STARTER MOTOR .....                     | 4-43         |
| PRESSURE SENSORS (IAP/MAP) .....                                   | 3-83         | DESCRIPTION .....                       | 4-43         |
| REMOVAL & INSTALLATION .....                                       | 3-84         | EXPLODED VIEWS .....                    | 4-45         |
| TESTING .....  | 3-83         | OVERHAUL .....                          | 4-49         |
| PROPELLER .....  | 2-21         | REMOVAL & INSTALLATION .....            | 4-43         |
| GENERAL INFORMATION .....  | 2-22         | STARTER RELAY/SOLENOID .....            | 4-42         |
| INSPECTION .....   | 2-24         | DESCRIPTION & OPERATION .....           | 4-42         |
| REMOVAL & INSTALLATION .....                                       | 2-25         | REMOVAL & INSTALLATION .....            | 4-43         |
| RE-COMMISSIONING .....   | 2-111        | TESTING .....                           | 4-42         |
| REMOVAL FROM STORAGE .....   | 2-111        | <b>STORAGE</b> .....                    | <b>2-108</b> |
| <b>REMOTE CONTROLS</b> .....                                       | <b>9-2</b>   | WINTERIZATION .....                     | 2-108        |
| MERCURY/MARINER .....  | 9-12         | RE-COMMISSIONING .....                  | 2-111        |
| YAMAHA .....   | 9-2          | TCI UNIT AIR GAP .....                  | 2-44         |
| <b>REMOTE CONTROLS - MERCURY/MARINER</b> .....                     | <b>9-12</b>  | TEMPERATURE SENSORS .....               | 3-80         |
| ASSEMBLY .....   | 9-15         | REMOVAL & INSTALLATION .....            | 3-83         |
| CLEANING & INSPECTING .....  | 9-15         | TESTING .....                           | 3-81         |
| DESCRIPTION & OPERATION .....                                      | 9-12         | THERMOSTAT .....                        | 5-27         |
| DISASSEMBLY .....  | 9-14         | REMOVAL & INSTALLATION .....            | 5-27         |
| REMOVAL & INSTALLATION .....                                       | 9-12         | THERMO-SWITCH .....                     | 5-28         |
| TROUBLESHOOTING .....  | 9-12         | CHECKING CONTINUITY .....               | 5-30         |
| WIRING DIAGRAMS .....  | 9-21         | DESCRIPTION & OPERATION .....           | 5-28         |
| <b>REMOTE CONTROLS - YAMAHA</b> .....                              | <b>9-2</b>   | OPERATIONAL CHECK .....                 | 5-30         |
| CHOKE SWITCH .....   | 9-2          | THERMO-SENSOR & THERMO-SWITCH .....     | 4-32         |
| CONTROL BOX ASSEMBLY .....   | 9-4          | CHECKING RESISTANCE .....               | 4-34         |
| KILL SWITCH .....  | 9-3          | DESCRIPTION & OPERATION .....           | 4-33         |
| NEUTRAL SAFETY SWITCH .....  | 9-3          | OPERATIONAL CHECK .....                 | 4-33         |
| REMOTE CONTROL BOX .....   | 9-2          | THROTTLE BODY AND INTAKE ASSEMBLY ..... | 3-61         |
| START BUTTON .....   | 9-3          | REMOVAL & INSTALLATION .....            | 3-61         |
| WARNING BUZZER/HORN .....  | 9-2          | THROTTLE POSITION SENSOR (TPS) .....    | 3-78         |
| WIRING DIAGRAMS .....  | 9-20         | REMOVAL & INSTALLATION .....            | 3-80         |
| <b>SAFETY IN SERVICE</b> .....                                     | <b>1-13</b>  | TESTING .....                           | 3-78         |
| DO'S .....   | 1-13         | <b>TILLER HANDLE</b> .....              | <b>9-16</b>  |
| DON'TS .....   | 1-13         | DESCRIPTION & OPERATION .....           | 9-16         |
| SELF DIAGNOSTIC SYSTEM .....                                       | 3-53         | REMOVAL & INSTALLATION .....            | 9-16         |
| <b>SHOP EQUIPMENT</b> .....  | <b>1-17</b>  | TROUBLESHOOTING .....                   | 9-16         |
| CHEMICALS .....  | 1-17         | <b>TIMING AND SYNCHRONIZATION</b> ..... | <b>2-49</b>  |
| SAFETY TOOLS .....   | 1-17         | GENERAL INFORMATION .....               | 2-49         |
| <b>SINGLE RAM INTEGRAL POWER TILT/TRIM - MERCURY/MARINER</b> ..... | <b>8-35</b>  | PREPPING THE MOTOR .....                | 2-50         |
| DESCRIPTION & OPERATION .....                                      | 8-35         | SYNCHRONIZATION .....                   | 2-50         |
| PTT ASSEMBLY .....   | 8-42         | TIMING .....                            | 2-49         |
| TROUBLESHOOTING .....  | 8-35         | 2.5 HP YAMAHA .....                     | 2-50         |
| <b>SINGLE TILT RAM POWER TRIM/TILT SYSTEM - YAMAHA</b> .....       | <b>8-3</b>   | 4 HP YAMAHA .....                       | 2-51         |
| DESCRIPTION & OPERATION .....                                      | 8-3          | 4/5/6 HP MERCURY/MARINER .....          | 2-52         |
| MAINTENANCE .....  | 8-5          | 6/8 HP YAMAHA .....                     | 2-54         |
| PTT ASSEMBLY .....   | 8-9          | 8/9.9 HP (232cc) YAMAHA .....           | 2-55         |
| TILT RELAY .....   | 8-6          | 8/9.9 HP (232cc) MERCURY/MARINER .....  | 2-59         |
| TILT SWITCH .....  | 8-7          | 15 HP (323cc) YAMAHA .....              | 2-61         |
| TRIM SENSOR .....  | 8-9          | 9.9/15 HP (323cc) MERCURY/MARINER ..... | 2-63         |
| TROUBLESHOOTING .....  | 8-5          | 25 HP .....                             | 2-64         |
| SPARK PLUG WIRES .....   | 2-43         | 30/40 HP 3-CYL (CARB) .....             | 2-66         |
| SPARK PLUGS .....  | 2-39         | 30/40 HP 3-CYL (EFI) .....              | 2-68         |
| <b>SPECIFICATIONS</b> .....  |              | 40/50/60 HP 4-CYL (EFI) .....           | 2-68         |
| BOLT TORQUE - METRIC .....   | 1-28         | 40/45/50 HP (935cc) .....               | 2-70         |
| BOLT TORQUE - U.S. STANDARD .....                                  | 1-28         | 40/50/60 HP (996cc) - CARB .....        | 2-70         |
| CONVERSION FACTORS .....   | 1-28         | 75/80/90/100 HP .....                   | 2-78         |
| CAPACITIES .....   | 2-118        | 115 HP MODELS .....                     | 2-82         |
| CARB - MERCURY/MARINER .....                                       | 3-106        | 150 HP YAMAHA .....                     | 2-86         |
| CARB - YAMAHA .....  | 3-105        | 200/225 HP MODELS .....                 | 2-90         |
| CHARGING SYSTEM - MERCURY/MARINER .....                            | 4-61         | TIMING BELT .....                       | 2-31         |
| CHARGING SYSTEM - YAMAHA .....                                     | 4-59         | INSPECTON .....                         | 2-31         |
| COOLING SYSTEM .....   | 5-31         | <b>TOOLS</b> .....                      | <b>1-19</b>  |
| CONVERSION FACTORS .....   | 1-28         | HAND TOOLS .....                        | 1-19         |
| GENERAL ENGINE .....   | 2-113        | OTHER COMMON TOOLS .....                | 1-22         |
| IGNITION SYSTEM - 1-CYL .....                                      | 4-55         | SPECIAL TOOLS .....                     | 1-23         |
| IGNITION SYSTEM - MERCURY/MARINER INLINE .....                     | 4-57         | ELECTRONIC TOOLS .....                  | 1-23         |
| IGNITION SYSTEM - YAMAHA INLINE .....                              | 4-54         | MEASURING TOOLS .....                   | 1-25         |
| IGNITION CONTROL SYSTEM - YAMAHA INLINE .....                      | 4-56         | <b>TRIM/TILT SYSTEMS</b> .....          |              |
|  |              | MERCURY/MARINER GAS ASSIST .....        | 8-31         |

# 10-22 MASTER INDEX

|  |             |                              |             |
|--|-------------|------------------------------|-------------|
| MERCURY/MARINER SINGLE RAM INTEGRAL POWER .....        | 8-35        | 6/8 HP YAMAHA .....          | 2-97        |
| YAMAHA HYDRO TILT LOCK .....                           | 8-2         | 8/9.9 HP (232cc) .....       | 2-97        |
| YAMAHA LARGE MOTOR POWER .....                         | 8-15        | 9.9/15 HP (323cc) .....      | 2-99        |
| YAMAHA SINGLE TILT RAM POWER .....                     | 8-3         | 25 HP .....                  | 2-99        |
| <b>TRIM &amp; TILT SYSTEMS - MERCURY/MARINER .....</b> | <b>8-28</b> | 30/40 HP 3-CYLINDER .....    | 2-100       |
| INTRODUCTION .....                                     | 8-28        | 40/45/50 HP (935cc) .....    | 2-101       |
| MECHANICAL TILT .....                                  | 8-28        | 40/50/60 HP (996cc) .....    | 2-101       |
| <b>TRIM &amp; TILT SYSTEMS - YAMAHA .....</b>          | <b>8-2</b>  | 75/80/90/100 HP .....        | 2-103       |
| INTRODUCTION .....                                     | 8.2         | 115 HP .....                 | 2-103       |
| <b>TROUBLESHOOTING .....</b>                           | <b>1-13</b> | 150 HP YAMAHA .....          | 2-105       |
| BASIC OPERATING PRINCIPLES .....                       | 1-13        | 200/225 HP .....             | 2-106       |
| CARBURETOR .....                                       | 3-14        | WATER PUMP .....             | 5-14        |
| COOLING SYSTEM .....                                   | 5-12        | EXPLODED VIEWS .....         | 5-19        |
| EFI .....  | 3-52        | INSPECTION & OVERHAUL .....  | 5-17        |
| ELECTRICAL .....                                       | 4-6         | REMOVAL & INSTALLATION ..... | 5-15        |
| IGNITION .....   | 4-12        | WINTERIZATION .....          | 2-108       |
| MERCURY/MARINER EFI .....                              | 3-55        | PREPPING FOR STORAGE .....   | 2-109       |
| STARTER .....  | 4-40        | <b>WIRING DIAGRAMS .....</b> | <b>4-62</b> |
| TILLER HANDLE .....                                    | 9-16        | <b>MERCURY/MARINER</b>       |             |
| <b>TUNE-UP .....</b>                                   | <b>2-36</b> | 4/5/6 HP .....               | 4-63        |
| COMPRESSION TESTING .....                              | 2-37        | 8/9.9 HP (232cc) .....       | 4-65        |
| ELECTRICAL SYSTEM CHECKS .....                         | 2-45        | 9.9/15 HP (323cc) .....      | 4-72        |
| ELECTRONIC IGNITION SYSTEMS .....                      | 2-45        | 25 HP .....                  | 4-78        |
| FUEL SYSTEM CHECKS .....                               | 2-46        | 30/40 HP .....               | 4-86        |
| IDLE SPEED ADJUSTMENT (MINOR ADJUSTMENTS) .....        | 2-48        | 40/45/50 HP (935cc) .....    | 4-92        |
| INTRODUCTION .....                                     | 2-36        | 40/50/60 HP (996cc) .....    | 4-97        |
| SPARK PLUG WIRES .....                                 | 2-43        | 75/90 HP .....               | 4-102       |
| SPARK PLUGS .....                                      | 2-39        | 2001 115 HP EFI .....        | 4-106       |
| TCI UNIT AIR GAP .....                                 | 2-44        | 225 HP EFI .....             | 4-112       |
| TUNE-UP SEQUENCE .....                                 | 2-36        | <b>YAMAHA</b>                |             |
| TUNE-UP SEQUENCE .....                                 | 2-36        | 2.5 HP AND 4 HP .....        | 4-63        |
| <b>UNDERSTANDING AND TROUBLESHOOTING</b>               |             | 6/8 HP .....                 | 4-64        |
| <b>ELECTRICAL SYSTEMS .....</b>                        | <b>4-2</b>  | 8/9.9 HP (232cc) .....       | 4-66        |
| BASIC ELECTRICAL THEORY .....                          | 4-2         | 9.9/15 HP (323cc) .....      | 4-76        |
| ELECTRICAL COMPONENTS .....                            | 4-2         | 25 HP .....                  | 4-82        |
| ELECTRICAL SYSTEM PRECAUTIONS .....                    | 4-8         | 30/40J/40 HP .....           | 4-91        |
| ELECTRICAL TESTING .....                               | 4-6         | 45/50/50J HP (935cc) .....   | 4-93        |
| TEST EQUIPMENT .....                                   | 4-4         | 60J/60 HP (996cc) .....      | 4-102       |
| TROUBLESHOOTING .....                                  | 4-6         | 75/80/90J/90/100 HP .....    | 4-105       |
| WIRE AND CONNECTOR REPAIR .....                        | 4-7         | 115J/115 HP EFI .....        | 4-109       |
| <b>VALVE CLEARANCE .....</b>                           | <b>2-94</b> | 150 HP EFI .....             | 4-110       |
| 2.5 HP YAMAHA .....                                    | 2-95        | 200/225 HP EFI .....         | 4-111       |
| 4 HP YAMAHA .....                                      | 2-95        | 200/225 HP EFI .....         | 4-114       |
| 4/5/6 HP MERCURY/MARINER .....                         | 2-96        |                              |             |